

ASSEMBLING INSTRUCTIONS

ITEM NO: 1051BE-1/ 1051BU-1/ 1051DG-1 Accent Chair


Legs and hardware are stored in the bottom of the seat, please take them out for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to spliting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY
Α		Chair Back	1 PC
В		Chair Seat	1 PC
С		Seat Cushion	1 PC
D		Back Cushion	1 PC
E	9999	Metal Leg 3-5/32"x3-5/32"x5-3/4"	4 PCS

PART	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16"×1-1/2"	14 PCS
2	©	Spring Washer Ø5/16"	14 PCS
3	0	Flat Washer Ø5/16"×3/4"	14 PCS
4		Allen Key M4	1 PC

STEP 1:

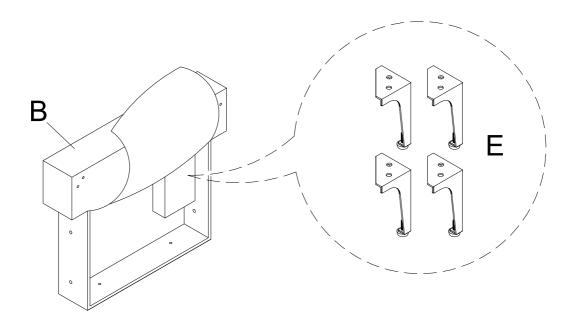





MADE IN VIETNAM Page: 1/3

HOMELEGANCE

ASSEMBLING INSTRUCTIONS

ITEM NO: 1051BE-1/ 1051BU-1/ 1051DG-1 Accent Chair

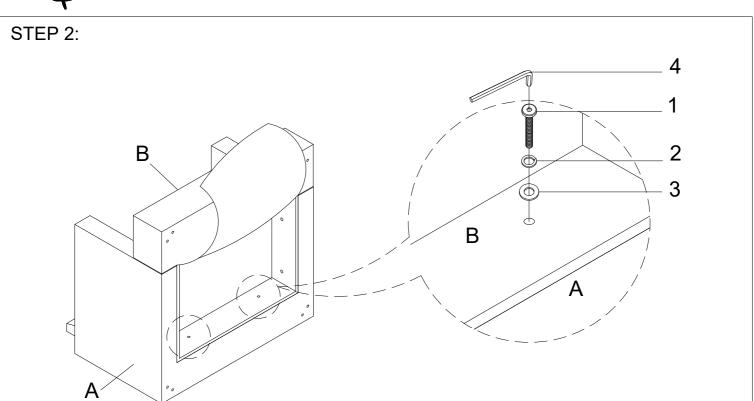

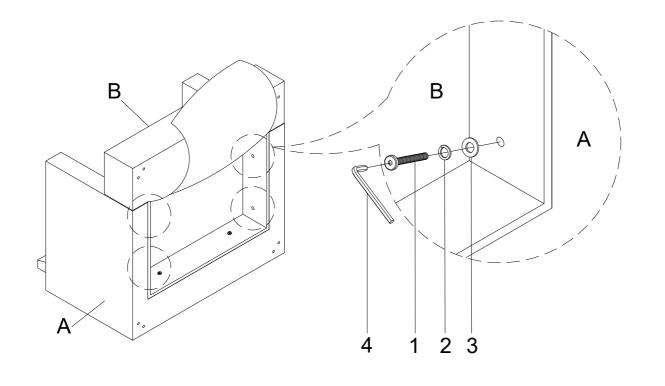


HOME EGANCE


ASSEMBLING INSTRUCTIONS

ITEM NO: 1051BE-1/ 1051BU-1/ 1051DG-1 Accent Chair

STEP 3:

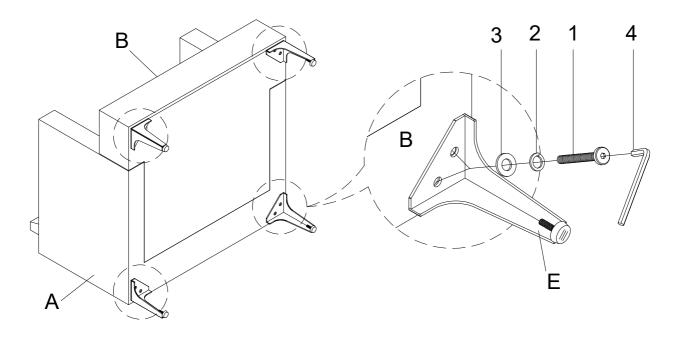

COMPLETED

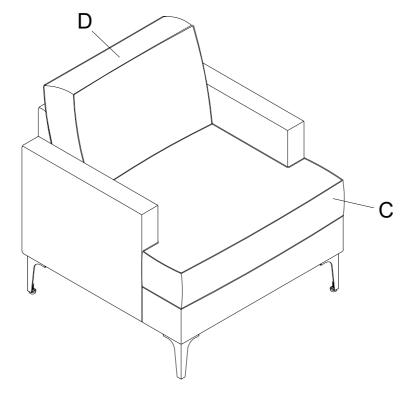

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your chenille furniture, please follow below simple care proceures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
 Sunlight and or exposure to heating and airconditioning outlets will fade/damage chenille.
 - Vacuum or wipe with a soft cloth to remove dust.
 - Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM Page: 3/3