

Thank you for being our valued customer. Be sure to check all packing materials carefully for small parts which have come loose inside the carton during shipment. Identify and count all items and compare them with the parts list below.

CAUTION: Read the Instructions carefully before assembly.


Г

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.

2. When you want to reposition the product, please always "LIFT & MOVE".

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

		PART LIST	
NO.	DESCRIPTION	PART NAME	Q'TY (PC)
1	1-L LSF Arm 1-R RSF Arm	<u> </u>	2
2	Daybed Slat 13 PCS/Roll		1
3	Trundle Slat 12 PCS/Roll		1
4	Plastic Feet	0	4
5	Trundle Back Panel		1
6	Trundle Side Panel		2
7	Packrest baffle		1
8	Side Rails		2
9	Daybed center support		1
10	Trundle Center Support		1
11	Trundle Front Panel		1
12	Back Rail		1
			PAGE 1 OF

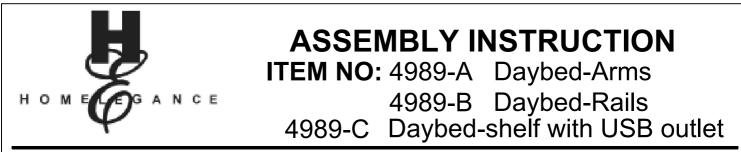

Thank you for being our valued customer. Be sure to check all packing materials carefully for small parts which have come loose inside the carton during shipment. Identify and count all items and compare them with the parts list below.

CAUTION: Read the Instructions carefully before assembly.


Г

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.

2. When you want to reposition the product, please always "LIFT & MOVE".

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

		HARDWARE PACKED WITH 4989-1	
A		Bolt Ø5/16" x 1-1/2"	8
B		Bolt Ø5/16" x 2-1/2"	4
C		Bolt Ø5/16" x3/4"	8
D	\bigcirc	Lock Washer 5/16"	20
E	\bigcirc	Flat Washer 5/16"x 19mm	16
F	\bigcirc	Flat Washer 5/16"x 22mm	4
G	()	Screw #8 X 1-1/4"	75
Ĥ	Dummin >	Screw #8 X 2"	4
		Allen wrench M5	1
J		Bolt Ø1/4" x15mm	10
K	\bigcirc	Flat Washer 1/4"x16mm	10
Ĺ	\bigcirc	Lock Washer 1/4"	10
M		Allen wrench M4	1
N		L bracket	5

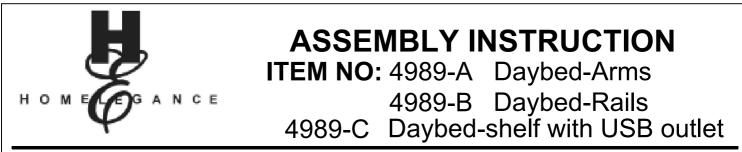

Thank you for being our valued customer. Be sure to check all packing materials carefully for small parts which have come loose inside the carton during shipment. Identify and count all items and compare them with the parts list below.


CAUTION: Read the Instructions carefully before assembly.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly. 2. When you want to reposition the product, please always "LIFT & MOVE".


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


Item No.	Discription		Parts Inside	Q.TY	Hardware	
	1-L LSF Arm 1-R RSF Arm	1	<u>}</u> ;	2PCS	 Bolt Ø5/16" x 1-1/2" Bolt Ø5/16" x 2-1/2" Bolt Ø5/16" x 3/4" Lock Washer 5/16" 	
4989-1	Daybed Slat 13 PCS/Roll	2		1PC	 Flat Washer 5/16"x 19mm Flat Washer 5/16"x 22mm Flat Washer 5/16"x 21mm Screw #8 X 1-1/4" 	
4909-1	Trundle Slat 12 PCS/Roll	3		1PC	 (I) → Screw #8 X 2* (I) → Allen wrench M5 (J) → Bolt Ø1/4* x15mm (S) ○ Flat Washer 1/4*x16mm 	
	Plastic Feet	4	٢	4PCS	Image: Constraint of the second se	
	Trundle Back Panel	5		1PC		
	Trundle Side Panel	6		2PCS		
	Packrest baffle	7	\int	1PC		
4989-2	Side Rails	8		2PCS		
	Daybed center support	9		1PC		
	Trundle Center Support	10		1PC		
	Trundle Front Panel	(11)		1PC		
4989-3	Back Rail	(12)		1PC		

STEP 1

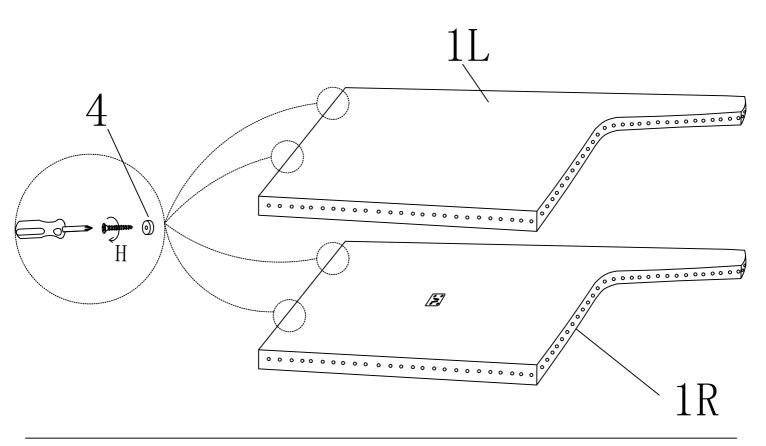


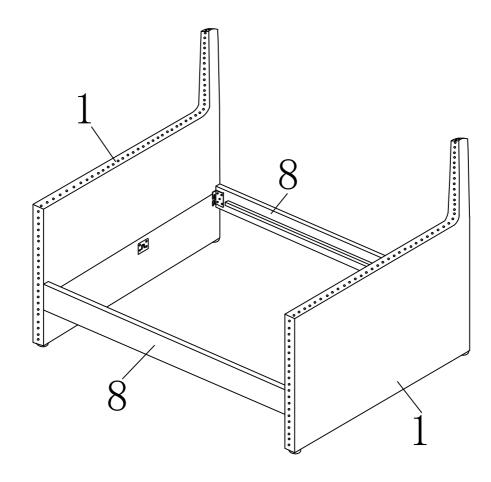


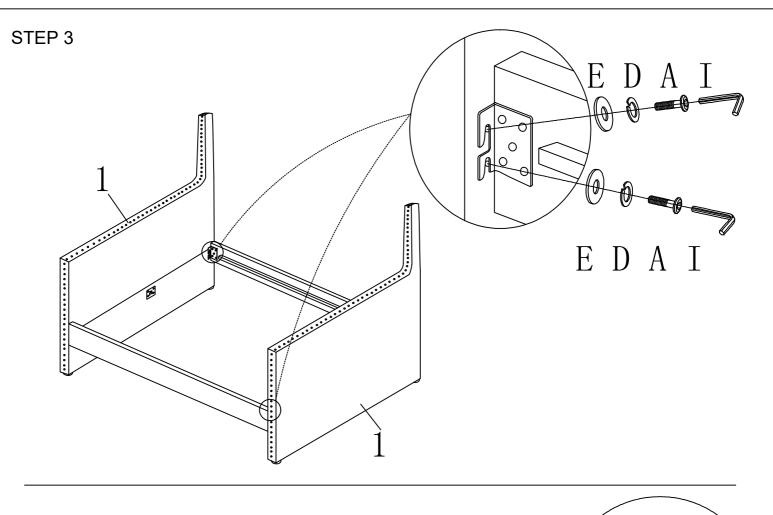

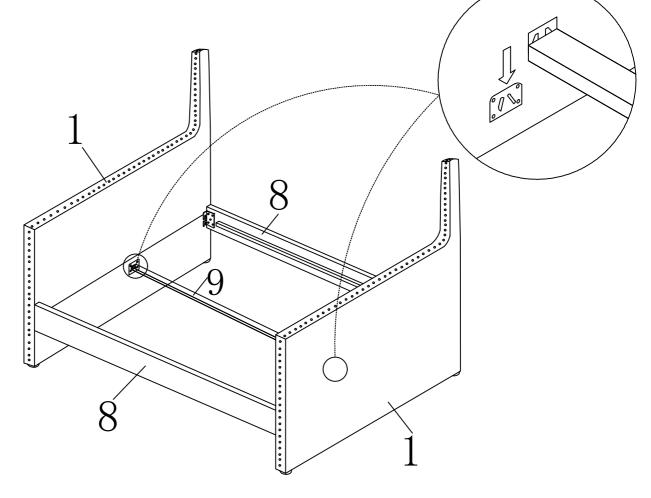



STEP 5

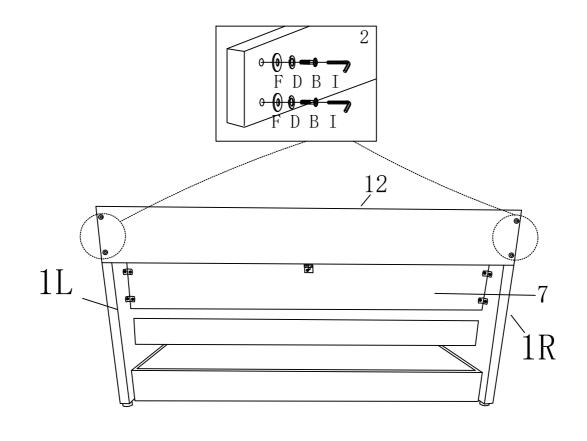


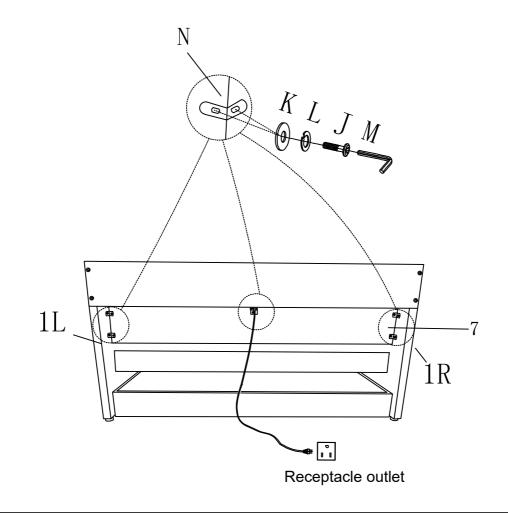



STEP 7

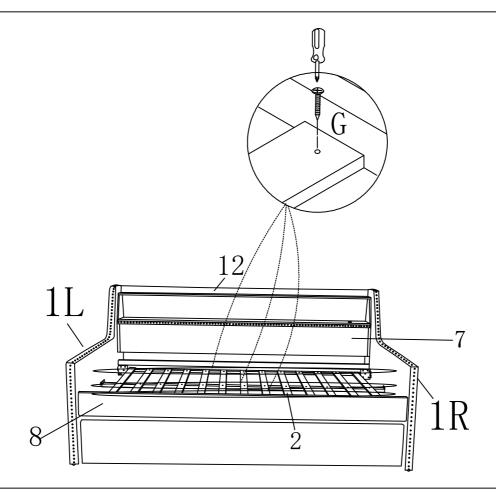


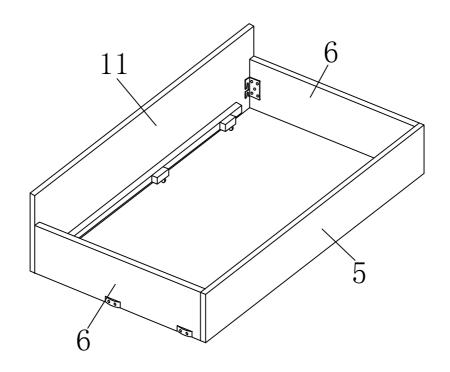

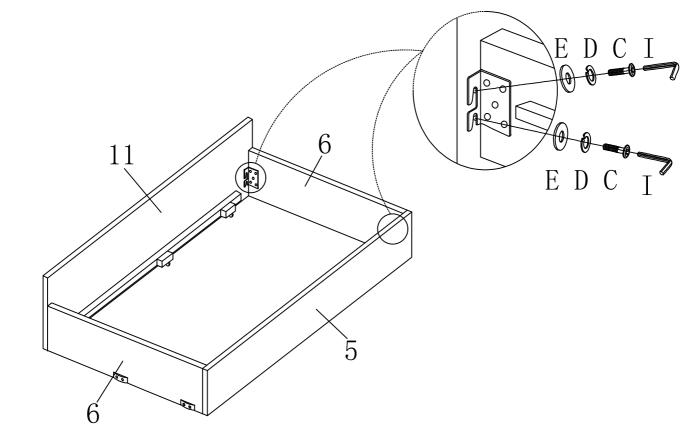


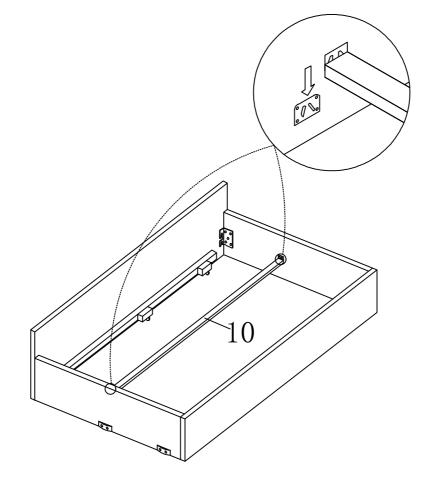

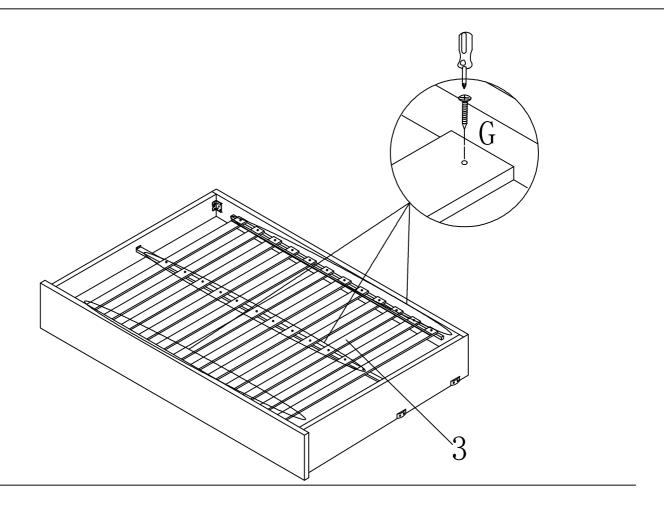

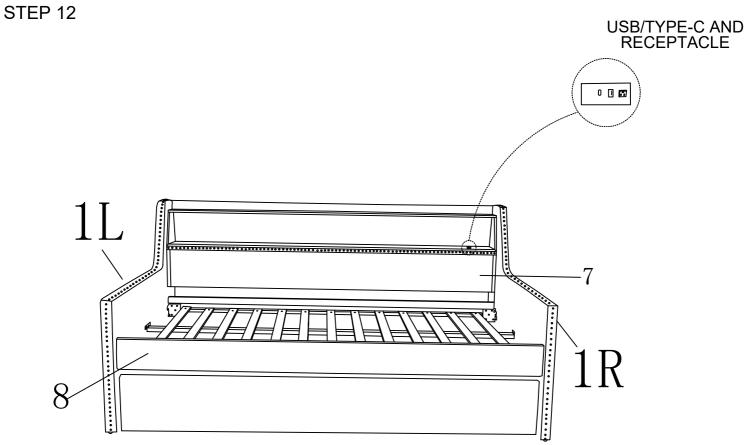

Completed

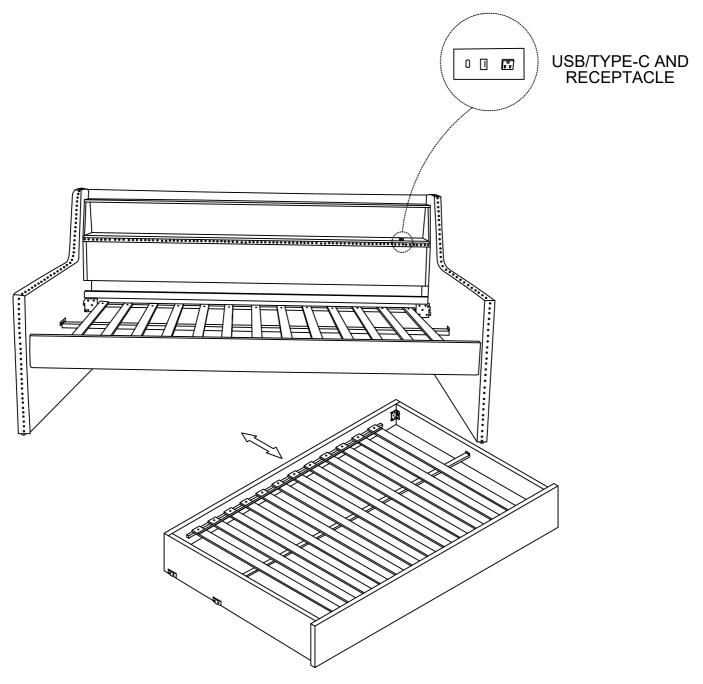

CARE INSTRUCTION FOR POLYESTER:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

• Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.

• Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

• Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary